

Portable Camera Kit


Camera and Mount

- Plug in the power cable to an available socket
- Make sure that the USB is plugged into the provided USB hub.
- The camera angle and zoom can be adjusted with a remote (see back of page)



USB Hub

- The USB hub can either be directly plugged into the classroom PC or a personal laptop.
- If you don't have a USB A port on your PC, a converter to USB C will be provided

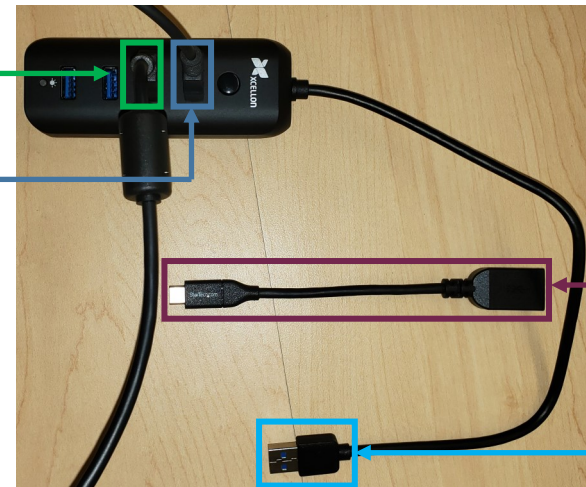


Microphone

- Make sure the microphone is plugged into the USB hub.
- You can mute the microphone by pressing this button.



Remote Instructions

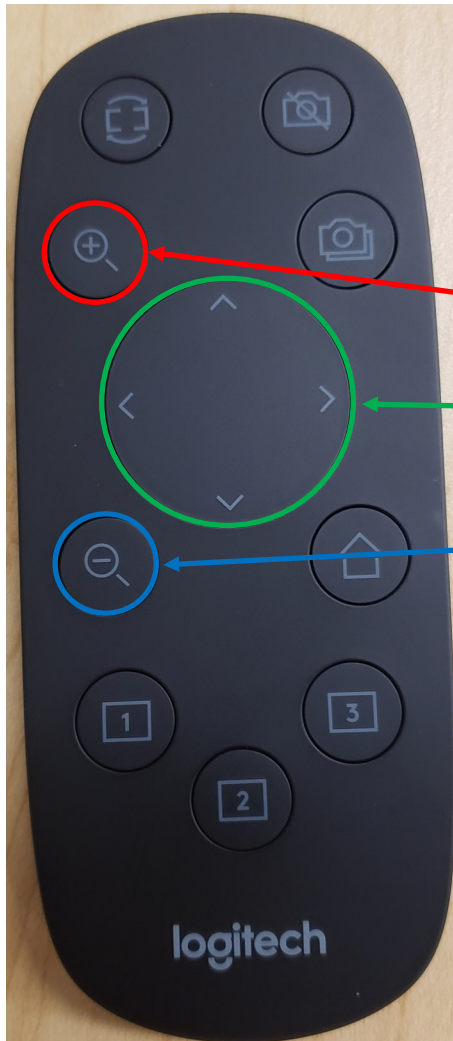

Logitech Camera Remote

- Use this button to zoom in.
- Use these controls to pan and tilt the camera to adjust to preferred direction.
- Use this button to zoom out.

